



TEST BEFORE FITTING:












How to remove headlights:



Remove 4 screws and unplug cables and connectors

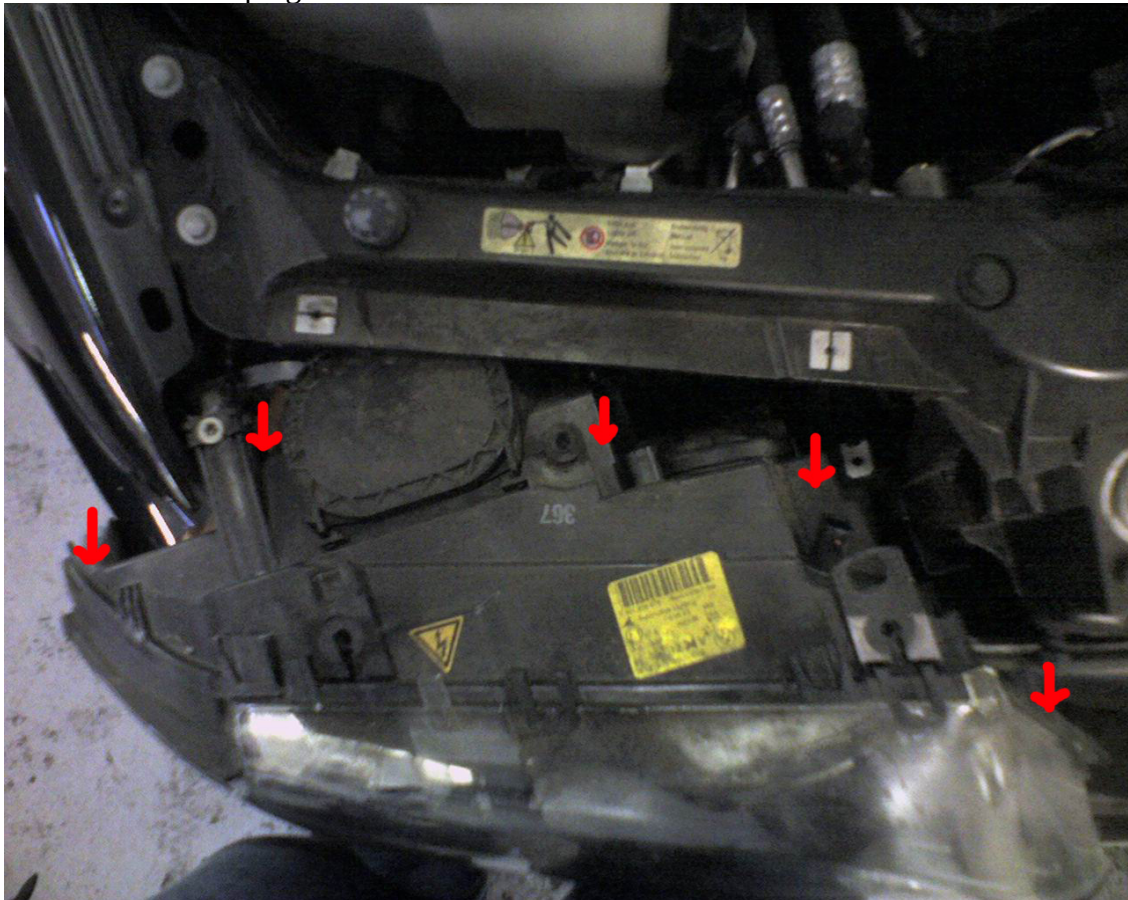

Remove headlight washer trim and cover (if applicable) and pull headlight away from the car. Use a hair dryer to soften the sealant and pull headlights apart. Make sure you remove the remaining screws on the back of headlights so the lense can be pulled away from the housing.

